

Resolution settings:

The mainboard has two kinds of video output ports: HDMI and VGA, HDMI only outputs 1280x720 resolution, VGA supports output of 1280x720 and 640x480, For example: if you are using VGA output, the output resolution is 1280x720, need to change the resolution to 640x480, So in the power off state, press and hold the setting button, then turn on the power, release it after 3 seconds, the resolution will be changed to 640x480, and the same operation can be change back to 1280x720. The setting button is as follows (picture 2).

Setting Menu:

In the game menu or in the game, press the setting button to into the setting menu

IO Test:

This option is to test the connection status of the coin selector, joystick and button of the console (picture 6).



picture6

Custom Button:

This option can customize your button habitually uses.

1 DEFAULT KEY MAP: This option is mainboard 40p connect to arcade console button custom, hold 1p or 2p start button for 3 seconds to enter each custom state (picture7) (picture8), Follow the prompts to custom the A-H button in the game and press 1p start save custom button and return. If you do not need to custom all button, just custom individual button. After custom individual button you need, press 1p start to complete custom, Other buttons will be assigned auto! Press the 1p start again will save and back to setting menu.

2 GAME CUSTOM: The standard game gamepad can be connected to the USB of the mainboard, Support 90% of gamepad in the market, the custom is the same as above.

3 RESTORES DEFAULT CUSTOM BUTTON: This option has two options, restores the console default button and restores gamepad default! Move up and down to select, 1p start button confirm.



picture7



picture8

System Config:

1 Credit Setting:

[free play] is the family mode. At this time, pause is on by default and locked to pause menu to exit the game. (picture9). [1:1, 2:1... 9:1], [1:2... 1:9], this is set to coin mode.

2 Exit Game Mode:

This option is for coin mode, set the exit mode of back to the game menu in the game. It can be set to use [menu exit]/[1P start + coin]/[hold 1p start for 3 seconds]

[Menu Exit] In the game, Hold 1P start button for 3 seconds, will show the menu to select exit (picture 10), this mode, the central manager will record and save coins, It means that the coins inserted in the game menu or game are stored here first, If the remaining coins are not insert to the game, Can be stored to return to the game menu, and can choose to enter other games to use. It can also cooperate with Item 3 "pause menu: ON", use pause button to show exit menu quickly select exit.

[1p start+ coin] In the game, hold 1p start, insert 1 coin, then exit to the game menu, 1 coin is valid. You can choose to enter other games to use. It can also cooperate with Item 3 "pause menu: ON", use pause button to show exit menu quickly select exit.

[hold 1p start 3 sec.] in the game, hold 1p start for 3 seconds to directly exit to the game menu, This mode can not record and store any coins to return to the game menu. It can also cooperate with Item 3 "pause menu: ON", use pause button to show exit menu quickly select exit.

3 Pause Menu:

[ON]/[OFF], cooperate with Item 2 "Exit Game Mode", convenient and quick exit.

4 Auto Exit:

[ON]: If joystick and button are not operated for 3 minutes in the game, it will auto return game menu.

[OFF]: This function will be closed, It will not auto exit game menu.

5 Select Game Mode:

This option can be set in the game menu, Whether need to after insert coin can move the joystick to select the game. This setting cannot be set in free play status. [menu exit] or [1p start+ coin] mode, you can set [Always]/[With Coin]

[With Coin]: After insert coin, can move joystick to select games

[Always]: Without insert coin can select game at any time

6 Quality Optimization:

[ON]: Output Game Screen Using Graphic Card Software to Calculate Output of High Quality.

[OFF]: Output game screen use original screen.

7 Scanning Line:

[ON]/[OFF], Let LCD come true CRT monitor display in the era of arcade, and let CRT monitor screen reproduce the classic picture.

8 Timer Mode:

[Home Game Timer Only]:Arcade games insert coin uses coin mode to play games, and home games insert coin uses timer mode to play games

[All Timer]:Arcade games and home games insert coin both uses timer mode to play games.

9 Game time:

In timer mode, how many minutes = 1 Coin, 1~60 minutes can be set.

10 Gamepad Setting:



This mode use 1P and 2P arcade joystick and button(40p gpio) + two gamepads to play games, and support 4players play games at the same time.



This mode use 1P arcade joystick and button + two gamepads to play games, and support 3players play games at the same time.



This mode closed 1P and 2P arcade joystick and button just use two gamepads to play games.



picture9



picture10

Game Setting:

1 Difficult &Lifes Setting:

Press A button enter into the difficult &lifes setting menu (picture11). Move the joystick to choose the game, press A button to set the difficult; press B button to set the lifes (The game cannot be set without number display) (picture12); Press C button will set the selected game as a unified standard setting; press 1P start button back.




picture11



picture12

2 Edit Games List:

Press B button enter into the display/hide game setting menu (picture 13); Move the joystick to choose the game you want to setup. Press A button to display/ hide game, after hidden the game,  will appear in front of the hidden game; press B button will display all games. If you just want to run a game, after select it then press C button hide all game, every time after the turn on the power will auto run this game; press 1P start button back.

3 Edit Favorite List:

If there are some games you like very much, you can favorite it, Press B to enter edit favorite list (picture 14); press A button to favorite,  will appear in front of the game name, it will display on top of the game menu. You can favorite of 99 games. Press C to cancel all favorite. press 1P start button back.



picture13



picture14




picture11




picture12

2 Edit Games List:

Press B button enter into the display/hide game setting menu (picture13); Move the joystick to choose the game you want to setup. Press A button to display/hide game, after hidden the game,  will appear in front of the hidden game; press B button will display all games. If you just want to run a game, after select it then press C button hide all game, every time after the turn on the power will auto run this game; press 1P start button back.

3 Edit Favorite List:

If there are some games you like very much, you can favorite it, Press B to enter edit favorite list (picture14); press A button to favorite,  will appear in front of the game name, it will display on top of the game menu. You can favorite of 99 games. Press C to cancel all favorite. press 1P start button back.



picture13



picture14


Book Keeping:

Mainboard can record all the number of insert coin, all insert coin will be recorded and displayed in [total coins:], it is under book keeping. if you need to clean the total coin records, please input password (picture 15), the default password is 55555555, joystick up & down change the number, left & right is next and return. after into can clean coin records and change the password (picture 16). Select change password, enter your old password to confirm, and then enter a new password.

Note: if you change the password, please keep it properly to avoid unnecessary loss. For assistance, please contact.



picture15

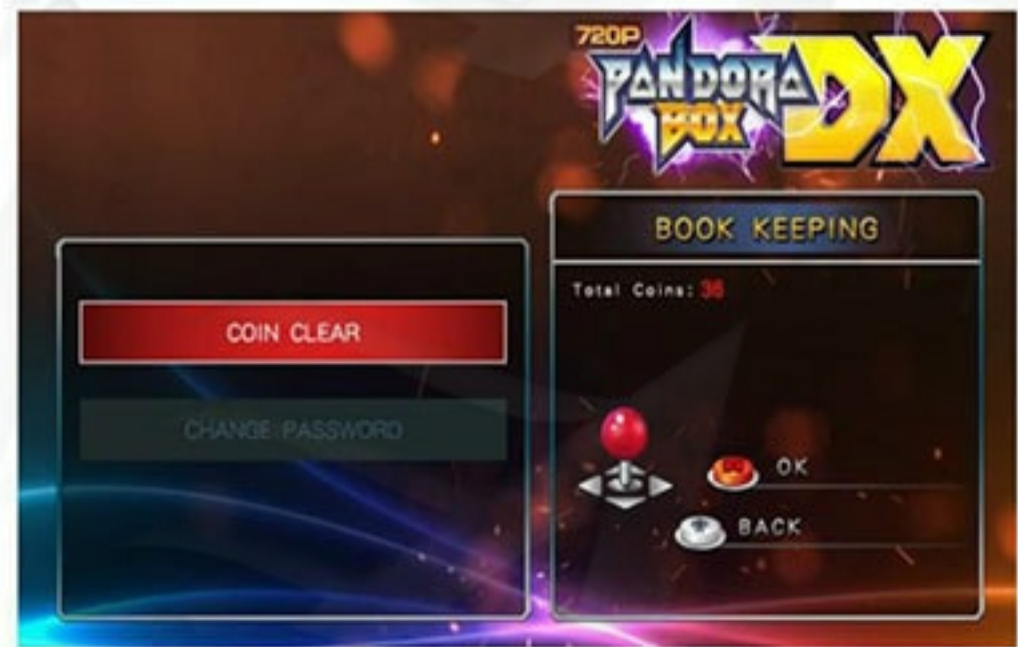

picture16

Built-In Speaker:

Mainboard support 2pin output to the speaker, when you choose to use HDMI or aux 3.5mm output sound, you can choose [OFF] close the speaker.

Language:

Mainboard supports three languages: English/ Spanish / Korean.

Boot Demo Movies:

When you lock a game in edit game list, you can choose [OFF], do not display boot demo video, quickly start the game by turn on power.

Save Setting:

Press A button to save the setting, it will show YES/NO, if you need to save all the settings you just changed, please select YES, without save please select NO; A button OK, then the screen will show SAVING..., when show SAVING... please do not turn off the power, the mainboard will auto restart and show the game menu.

Factory Setting:

Select [YES] will restore the factory settings. Select [NO] without any settings.